

Fixture Command

This page describes the syntax and how to use the fixture command.

To go to the fixture command, press **Fixture** on the console.

Description

With the fixture command you select fixtures in the [fixtures view](#).

Syntax

Select fixtures.

A dark grey rectangular bar representing a console input. On the left, the text 'Fixture 10' is displayed in white. On the right, there is a small icon of a grid of dots, representing a keypad or display.

Example 1

Let's assume, you will select all dimmers fixtures 1 thru 10.

Press **Fixture** **1** **Thru** **10** **Please**.

All fixtures from 1 to 10 are selected in the fixtures view.

Example 2

Let's assume, you will just select subfixture 5 of the fixture cluster 11.

Press **Fixture** **11** **.** **5** **Please**.

Subfixture 5 of fixture cluster 11 is selected in the fixtures view.

Related Links

- [Fixtures View](#)
- [Fixture Key](#)
- [System Colors](#)