

Network Dimmer

Monitor and configure a dimMA system in the window **MA Dimmer Network**.



Important:


This section deals with the configuration of MA NDPs in the view **MA Dimmer Network**. The configuration of MA NDPs in the window **MA Network Configuration** is dealt with in [Control the MA NDP](#).

Requirement:

- Add MA NDPs to the network configuration

For more information see [Adding devices to your session](#).

1. Open the **MA Dimmer Network**.
 - Open **Create Basic Window**. For more information see [Manage windows](#).
 - Tap **System** and then tap **Network Dimmer**.
 - MA Dimmer Network** opens.

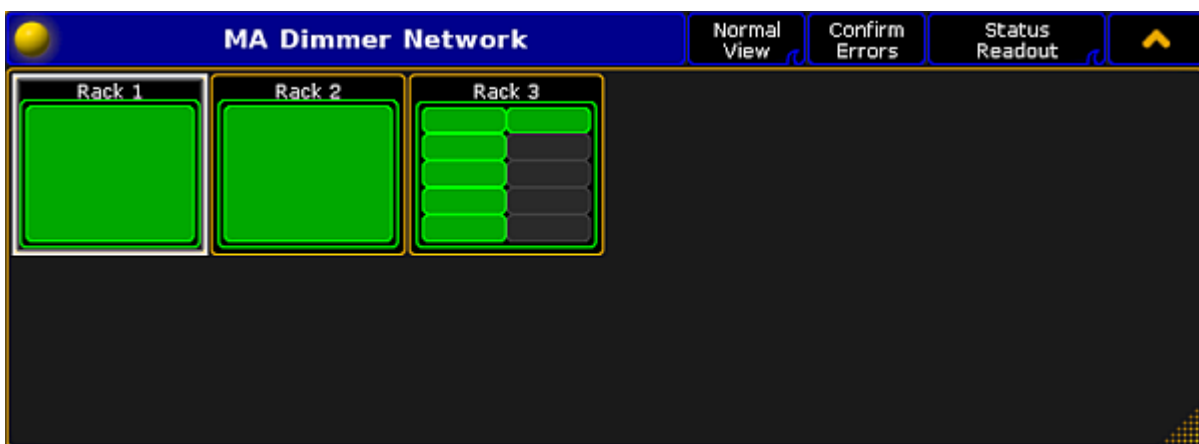


Open MA Dimmer Network

2. To navigate down in the hierarchy of the dimmer network:
 - Tap a rack and a window displaying crates opens.




Navigate down to the crates

-Tap a crate and a window displaying modules opens.

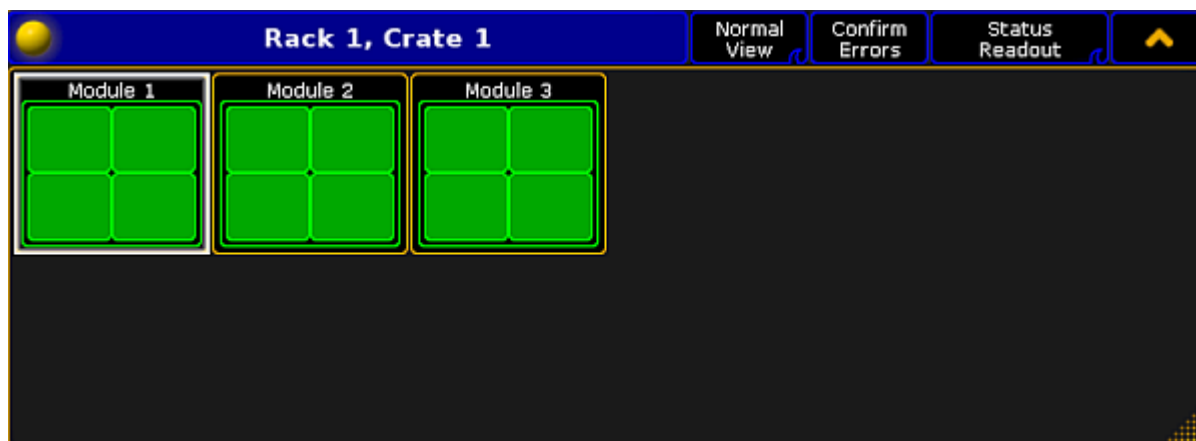

Navigate down to the modules

-Tap a module and a window displaying dimmers opens.

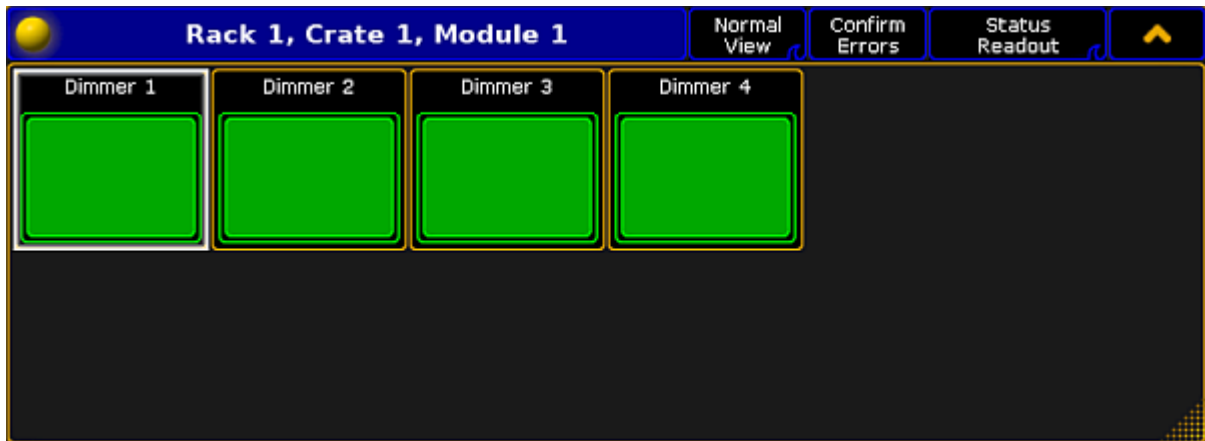

Navigate down to the dimmers



Hint:

Dimmer is the deepest you can go in the hierarchy.

3. To navigate upward in the hierarchy, tap  in the upper right corner of the title bar.

The dimMA Hierarchy

The dimMA hierarchy consists of racks, crates, modules, and dimmers.

Rack:

A rack consists of 1 or 2 NDPs and at least 1 crate.

Crate:

A crate consists of 3 modules.

Module:

A module consists of 1, 2 or 4 dimmers.

Dimmer:

A dimmer holds all the corresponding configuration data.