

Wing & Monitor Setup

Assign wings to an executor or assign external displays to internal screens in Wing & Monitor Setup.


Requirements:

- The resolution of the external screen has to be set to 1280 x 800 before assigning the internal screen to it.
- The external screen has to be calibrated before assigning the internal screen.

For more information on how to set the resolution see [Change Screen Resolution for External Screens](#).

Open the Wing & Monitor Setup:


1. Press **Setup**.
2. Tap **Wing & Monitor Setup** in the column **Console**.
3. The menu **FaderWing and CommandWing Setup** opens in the graphic mode.

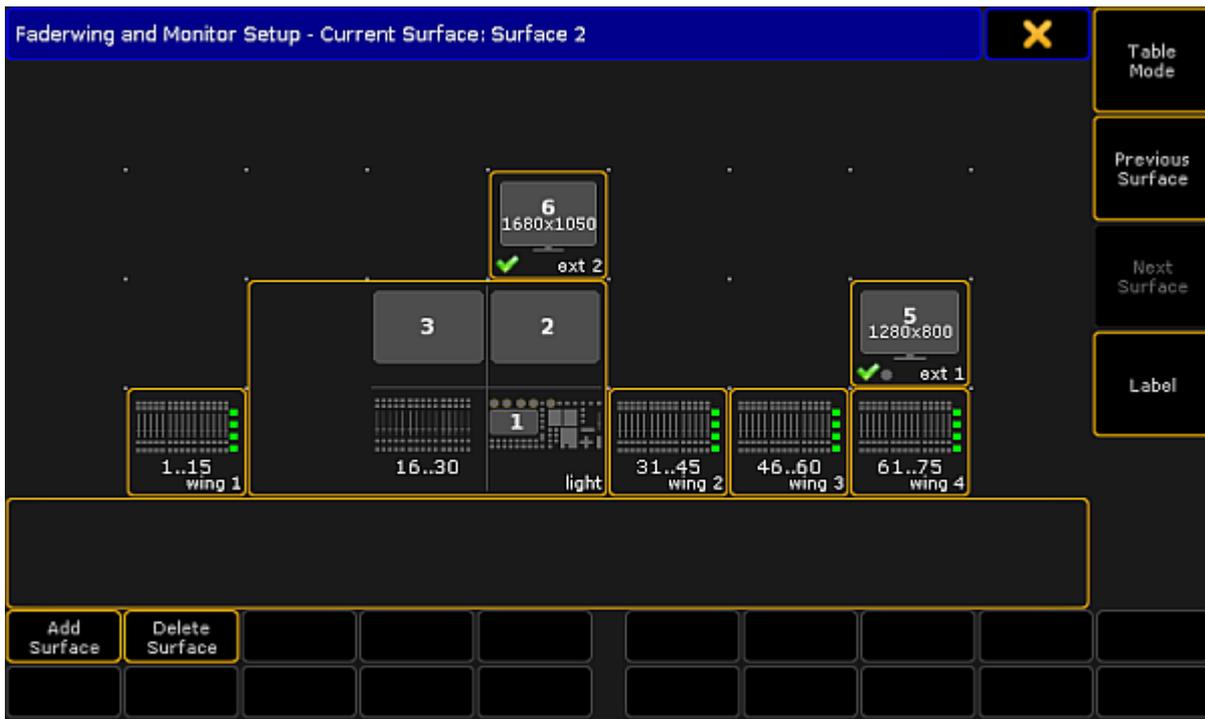

Display of a current surface in grandMA2 – graphic mode

4. To remove the write protection and to add a new screen, tap **Add Surface**.


5. Assign the internal screen to an external screen:
 - Tap and hold an external screen displayed in the menu above.
 - A pop-up opens displaying the screens.

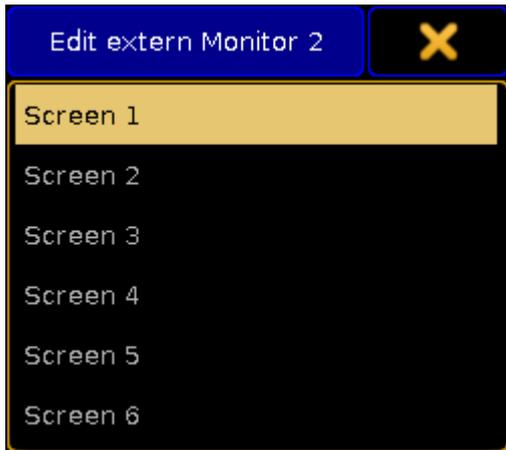

Assign a screen to an external screen

- Tap for example Screen 1.
 - The internal screen 1 is now assigned to an external screen.
6. Tap and move an external screen to a favored position in menu.
 - If an external screen is moved to the side, using the tracking ball or a mouse moves the cursor to the side.
 - If an external screen is moved to the top, using the tracking ball or a mouse moves the cursor to the top.
 - When operating a console move an external screen using a wing. Use the encoder of the wing to navigate in the screen.

7. Configure an internal or external wing:
 - Edit the command wing displayed at the bottom of the current surface.
 - A pop-up opens displaying the configuration.

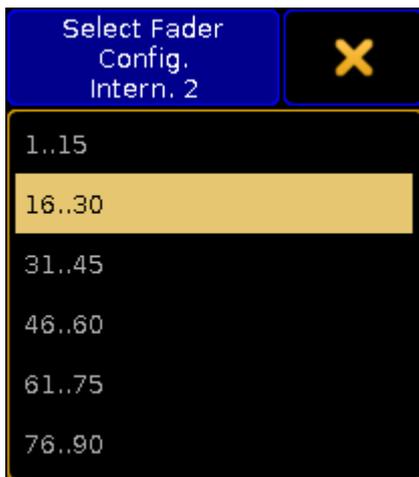

Configuration of wings

- Tap to select a wing.
8. To label the surface, tap **Label** on the right of the menu.
 9. Change surfaces:
 - To return to the previous surface, tap **Previous Surface**.
 - To jump to the next surface, tap **Next Surface**.


You can also call a surface using the command line. For more information see the [Surface keyword](#).

10. To delete a surface, tap **Delete Surface**.

The settings are now applied.

Table Mode

1. To display the settings in a table, tap **Table Mode** on the right of the menu.
2. The menu opens.

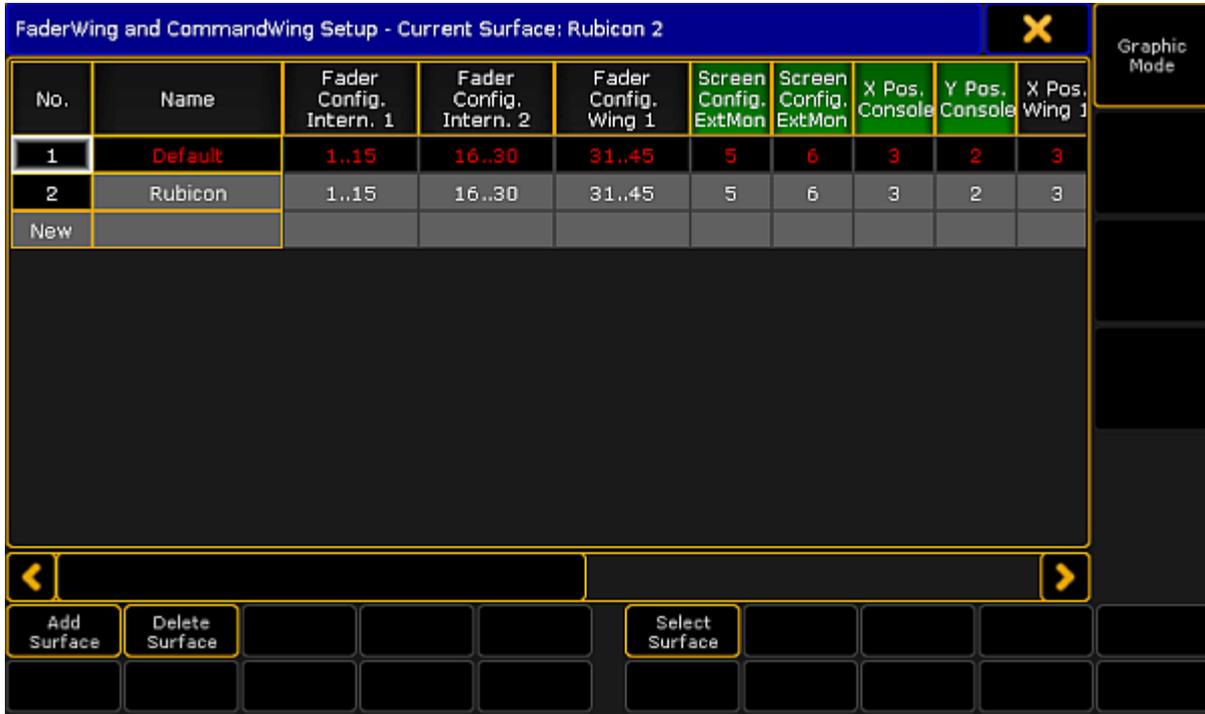

Wing & monitor setup – table mode

3. Add a surface:
 - Tap **Add Surface** or tap and hold the cell **New** in the column **No.** or an empty cell in the column **Name**.
4. Label the surface:
 - After adding a surface, tap the cell **Surface**.
 - A pop-up **Edit Name** opens.
 - Enter the name.
 - The surface is now labeled.
5. Apply a surface:
 - Tap **Select Surface**. The cell you have tapped is now applied.
6. Edit cells:
 - To edit single cells, tap and hold the cell.
 - A pop-up opens displaying the wings.
 - Tap to select a wing.
 - The wing you have selected is now applied.
7. To revert to the graphic mode, tap **Graphic Mode**.

All settings are now applied.