

SnapPercent Keyword

To get the SnapPercent keyword in the command line by using the keys, it is necessary to press another function key before, e.g. **Store** and then five times **Time**.

You can also type, **SnapPercent** or the shortcut **Sn** in the command line.

Description



Important:

To use the SnapPercent it is necessary that attributes of the fixture types must have Snap On. Go to the **Patch & Fixture Schedule | Fixture Types**. Select a fixture type and click **Edit** in the column **Snap** select **On**.

With the SnapPercent keyword, you set a snap time in percent.

The snap time is a delay time for not fading attributes, eg. gobo or colorwheel.



Hint:

To see the assigned snap percent, press **Edit** and then the executor button. The edit executor pop-up opens. In the table is a column snap percent, what displays the assigned snap percent.

Syntax

SnapPercent [Value-list]

Examples

- Store a cue with a snap percent of 4.

```
[Channel]> Store Cue 1 SnapPercent 4
```

- Assign a snap percent to an existing cue.

```
[Channel]> Assign Cue 1 SnapPercent 4
```