



Configure the MA NDPs



Important:

This topic deals with settings that can be made in the **MA Network Configuration** of MA NDPs. General settings are dealt with in [Adding devices to your session](#). For information on the configuration of MA NDPs in the view **MA Dimmer Network** see [Network dimmer](#) and this topic's corresponding subtopics.

Requirements:

- Add an MA NDP to the network configuration.

For more information see [Add the MA NDPs](#).

1. Open the **MA Network Configuration**.
-Press **Setup** and tap **MA Network Configuration**.
2. The window **MA Network Configuration** opens.
-Tap **NDP Dimmer**.

Setup/Network/MA Network		Save to Default	Load from Default	Master 1				
Console	onPC	NPU	3D	VPU	NDP Dimmer	DMX Node	Network Switch	
IP	Hostname	Session	Session Member	Rack Number	Type	XLR A	XLR B	Ver
ETHERCON 1(ETH0)								
172.16.7.211	dimMA_211	1	Yes	2	NDP			3.3
172.16.7.212	dimMA_212	1	Yes	2	NDP			3.3
172.16.7.213	dimMA_213	1	Yes	1	NDP			3.3
172.16.7.214	dimMA_214	1	Yes	1	NDP			3.3
172.16.7.215	dimMA	1	Yes	3	NDP			3.3
172.16.7.216	dimMA	1	Yes	3	NDP			3.3
New								
Minimally Accepted NDP Version:								
• 3.1.229.0								
Add	Delete				Add Present	Remove Absent	Remove Non-Member	

Open NDP Dimmer in Network Configuration



Hint:

The columns displayed in green are editable.

3. To edit the hostname, tap and hold a cell in the column **Hostname**.
 - The calculator opens.
 - Enter the name.
4. To remove an MA NDP from the session, tap and hold a cell in the column **Session Member**.
 - Yes** disappears and the cell turns gray.

IP ETHERCON 1(ETH0)	Hostname	Session	Session Member	Rack Number
172.16.7.211	dimMA_211	None		2
172.16.7.212	dimMA_212	None		2
172.16.7.213	dimMA_213	1	Yes	1
172.16.7.214	dimMA_214	1	Yes	1
172.16.7.215	dimMA	1	Yes	3
172.16.7.216	dimMA	1	Yes	3

Remove MA NDP from session



Hint:

Remove MA NDPs from the session before deleting them. For more information see [Delete the MA NDPs](#).

5. To edit the rack number, tap and hold a cell in the column **Rack Number**.
 - The calculator opens.
 - Enter the number of the rack.



Hint:

Changing the rack number proves handy if you have configured specific settings in the view **MA Dimmer Network**. For more information on the settings in MA Dimmer Network see [Network dimmer](#) and this topic's corresponding topics.

The MA NDPs are configured and the settings are applied.