

X-Key Labels

The X-Key labels are located at the bottom of screen 1.

In the middle of the X-Key labels is the page displayed.

Three pages are available:

- User1
- User2
- Button Page 1 thru 9999.

If you press **User1**, the X-Key labels displays the function of [view button](#) 11.1 - 11.20.

If you press **User2**, the X-Key labels displays the function of [view button](#) 11.21 - 11.40.



X-Key Labels for User 1

If you press **List**, the X-Key labels displays the [mini executor bar](#) for the executor buttons 201 - 220 on the current button page.

To change the button page, press **Bt Pg +** or **Bt Pg -**.



X-Key Labels for Mini Executor Bar