



Level wheel

The level wheel is placed on the right side of the numeric keys.

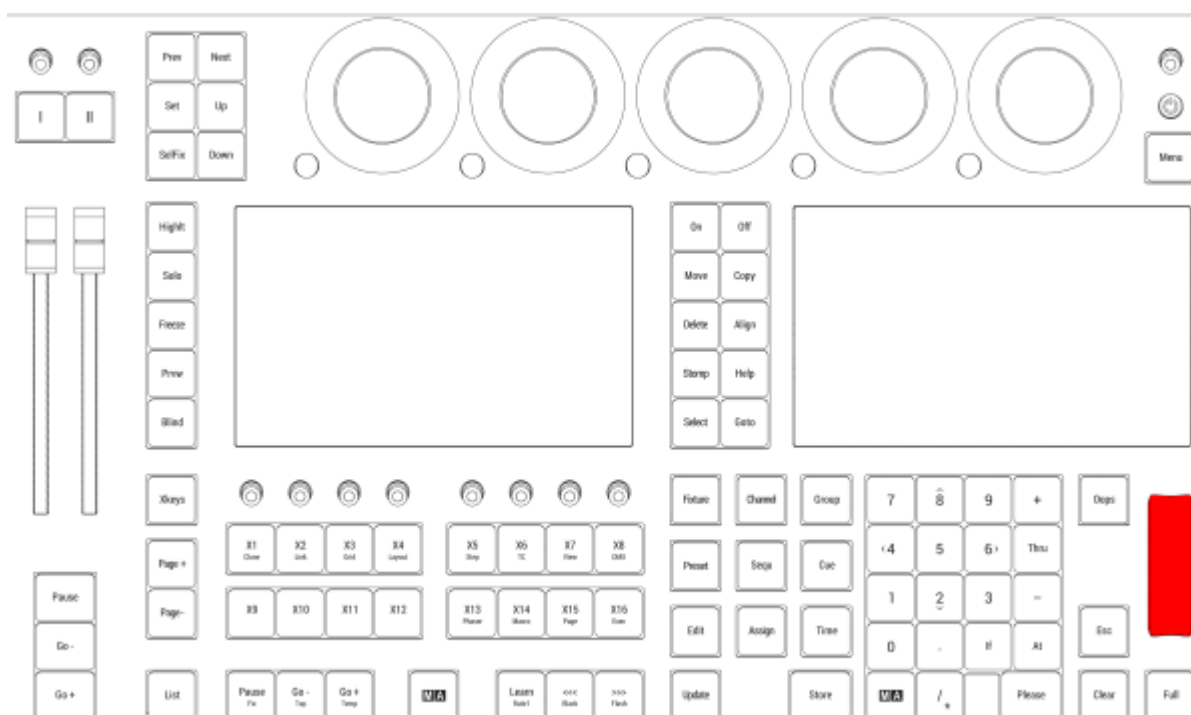

Location on grandMA3 full-size and grandMA3 light consoles

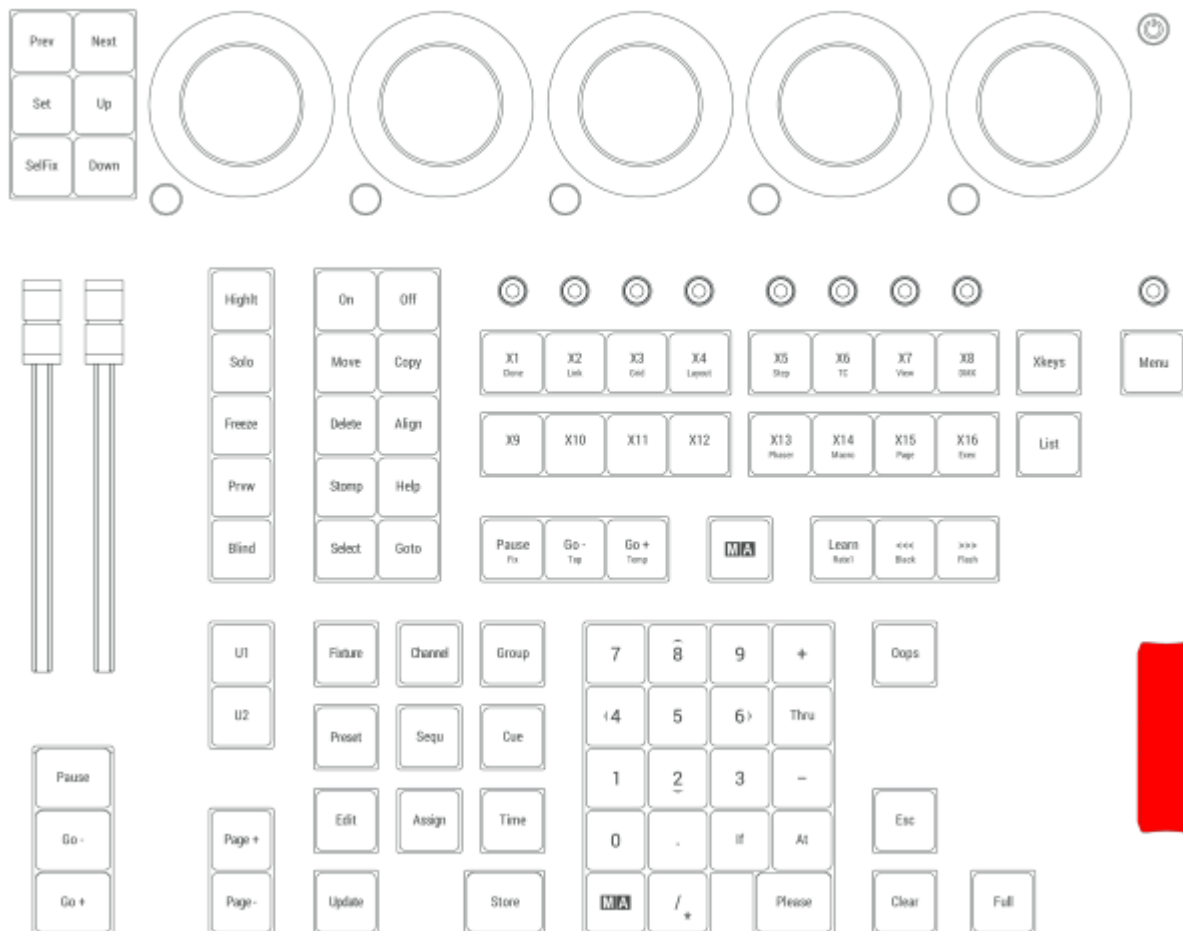

Location on grandMA3 compact consoles and grandMA3 onPC command wing

The level wheel is used to adjust the intensity of the selected fixtures.