



TempFader Keyword

To get the TempFader keyword in the command line, type **TempFader** or the shortcut **TempF** in the command line .

Description

The TempFader keyword, is a function that crossfades the cue on when pulled up, and crossfades the cue off when pulled down.

For more information, see [executors - assign a function](#).

Syntax

Assign TempFader [Executor-list]

TempFader [Value] [Executor-list]

Examples

- Assign executor 28 as a temp fader.

 [Channel]> Assign TempFader Exec 28

- Set the temp fader to 50 % for the selected executor.

 [Channel]> TempFader 50