



Status Bar

The status bar offers an overview about the system status:



Connection: 2	Not connected (red heart) or connected (green heart) as described in: Connection The number indicates the number of the session.
Show: vpu demo show	Name of the show file
Dongle: (green checkmark)	Shows the status of the dongle
IP: 172.16.7.160	Used IP address for MA Net
DVI: (green checkmark) PM: (red X)	Shows the render settings states: DVI- output and Pixel Mapper
(yellow heart) Invite enabled	Inviting of the VPU can be enabled or disabled



User: administrator	Shows all existing users, e.g. administrator, guest...' Some features e.g. the blind-functionality need the assignment to a user.
F Layer: VPU A	Shows the used fixture layer. You can switch the fixture layer via this drop down menu.
Out 1: CAM 1	Assign a VPU camera (e.g. Camera 1) to an output. This function is identical to the former "Softedge ID"