grandMA2 User Manual – Other System Tools – Network dimmer Version 3.8 – 2025-05-05 English



# Edit a Module

You can also edit modules.

# **Requirement:**

• Add MA NDPs to the network configuration

For more information see Adding devices to your session.

# • Open MA Dimmer Network

For more information on how to open the MA Dimmer Network see Network dimmer.

1. To edit a module, navigate down to the modules in the hierarchy of the dimmer network.

For more information on how to navigate down in the hierarchy see Network dimmer.

Press Edit and tap a module.
The pop-up Module Properties opens.

Rack 1, Crate 1, Module 2 Properties												
Showing 'NDP_MODULE'												
	No.	Name	Auto Name	Patch1	Patch2	Profile	Preheat	U min	U max	Panic	Cc	
	1:1:2:1	DMX #0002	On	2	2		0	0	250	0%		
	1:1:2:2	DMX #0003	On	3	3		0	0	250	0%		
	1:1:2:3	DMX #0004	On	4	4		0	0	250	0%		
	1:1:2:4	DMX #0005	On	5	5		0	0	250	0%		
<											>	
					Module Type:				4			
					Power Class:				ЗKVA			
				Rise Time:				280 µs				
						Choose Config			<	>		

Edit a module





3. To select a type of configuration, tap Choose Config and the pop-up Choose Configuration opens.

Select configuration

### -Tap to choose a type.

-The configuration is now applied and can be edited.



You can edit columns in the **pop-up Module Properties**. For more information on the single columns see <u>Views – Dimmer View</u>.

4. To edit the columns, tap and hold or press **Edit** and tap a cell of the corresponding column. Or select the cell and press the screen encoder.

-Depending on which column is being edited, either the **calculator** opens, **On** is displayed, or the cell is empty.

5. To select the next or the previous module, tap

### The module is now edited.

grandMA2 User Manual – Other System Tools – Network dimmer Version 3.8 – 2025-05-05 English

