

Format a USB stick for Linux


This topic describes how to format a USB stick for Linux. This is necessary for a later update via boot menu or a factory reset.

Requirements:

- An empty USB stick
- A software version .imgz file (download the latest software version at www.malighting.com)
- MA stickMAKER (download the MA stickMAKER at www.malighting.com under **Utilities**)

To format a USB stick for a later grandMA2 update:

1. Install the MA stickMAKER by double click at the **StickMaker-x.x.x.x.exe**.
You will be guided through the installation process.
2. Insert an empty USB stick in your computer.
3. Open the MA stickMAKER by a right mouse click, and then click at **Run as administrator**.
The **MA stickMAKER** opens.

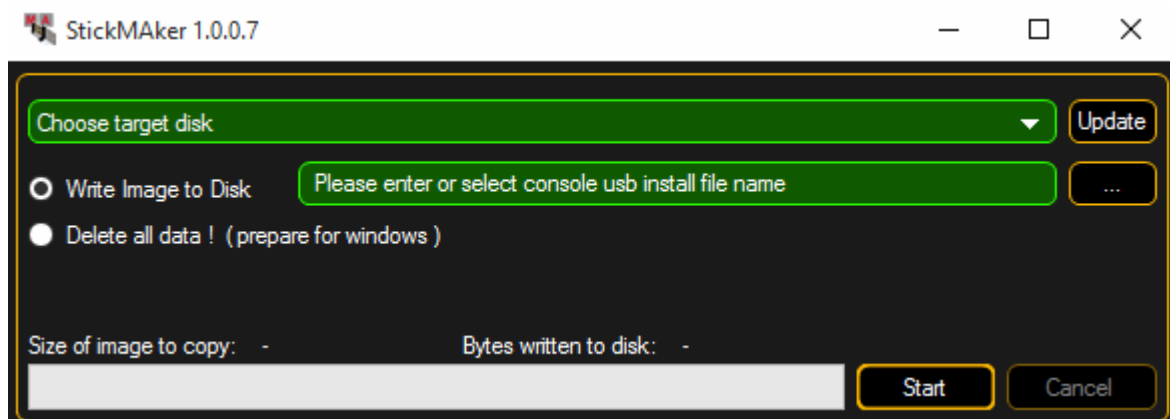

MA stickMAKER

4. Select the **USB drive** in the green target field, then click at the three dots and select the **gMA2Console_v*.imgz** file.
Click **Start**.
The stick will be formatted to a Linux stick and the image will be written to the stick. This process takes about three minutes. When the copy operation is succeeded, a pop-up opens.
5. Click **Ok**.
6. Remove the USB stick from the computer.

The USB stick is formatted into a Linux USB stick and ready for a grandMA2 update or a factory reset.