



CrossfadeA keyword

CrossfadeA is a function assigned for executors.

To execute this keyword, type **CrossfadeA** into the command line.

Syntax

Assign CrossfadeA (At) [Executor-list]

CrossfadeA [value] [Executor-list] (Fade [seconds])

CrossfadeA is a function that gradually fades down dimmer attributes of the current step of an executor in accordance with the position of the fader.

Depending on the executor option AB/Split this function will either act as a Crossfader for decreasing values or as a Master for the current cue (for dimmer attributes).

Example:

 [Channel]> Assign CrossfadeA At Executor 1

Assigns fader 1 the functionality of CrossfadeA.