



PrevRow Keyword

To go to the PrevRow keyword, press and hold  + .

You can also type **PrevRow** in the command line or use the shortcut **PrevR**.

Description

If MAtricksInterleave is on, PrevRow reduce the Single Y value by one.

If Single Y was at 0, the last Single Y value will be used. For more information, see [MAtricks](#).

The PrevRow keyword is a function keyword.

Syntax

PrevRow

Example

Select the last row of fixtures, if MAtricksInterleave is on.

 [Channel]> PrevRow