 


Pressing **Go-** enters the Go-keyword into the command line.




Pressing and holding **MA** + **Go** enters the Top keyword into the command line.



The control panel features a complex arrangement of controls:

- Top Left:** Two small circular buttons, a 2x2 grid of buttons labeled 'Pre', 'Next', 'Set', and 'Up', and another 2x2 grid labeled 'Selfie', 'Down', 'I', and 'II'.
- Top Center:** Five large circular buttons, each with a smaller circle below it.
- Top Right:** Two small circular buttons, a 'Menu' button, and a vertical slider.
- Left Side:** Two vertical sliders and a column of five buttons labeled 'Height', 'Size', 'Focus', 'Power', and 'Blind'.
- Center:** A large rectangular display area.
- Right Side:** A column of five buttons labeled 'On', 'Off', 'Move', 'Copy', 'Delete', 'Align', 'Stamp', 'Help', 'Select', and 'Goto', followed by another large rectangular display area.
- Bottom Left:** A 'Pause' button, a 'Go -' button, and a 'Go +' button.
- Bottom Center:** A row of eight circular buttons, followed by two rows of four buttons labeled X1 through X16 (e.g., X1 Close, X2 Link, X3 End, X4 Logout).
- Bottom Right:** A grid of buttons including 'Future', 'Channel', 'Group', 'Preset', 'Scene', 'Cap', 'Edit', 'Assign', 'Time', 'Store', and a numeric keypad (0-9, +, -, \*, /). Other buttons include 'Dogs', 'Esc', 'Clear', 'Full', 'M/A', 'Please', 'Flash', 'Back', 'Next', 'List', 'Phase', 'Go + Temp', and 'N/A'.

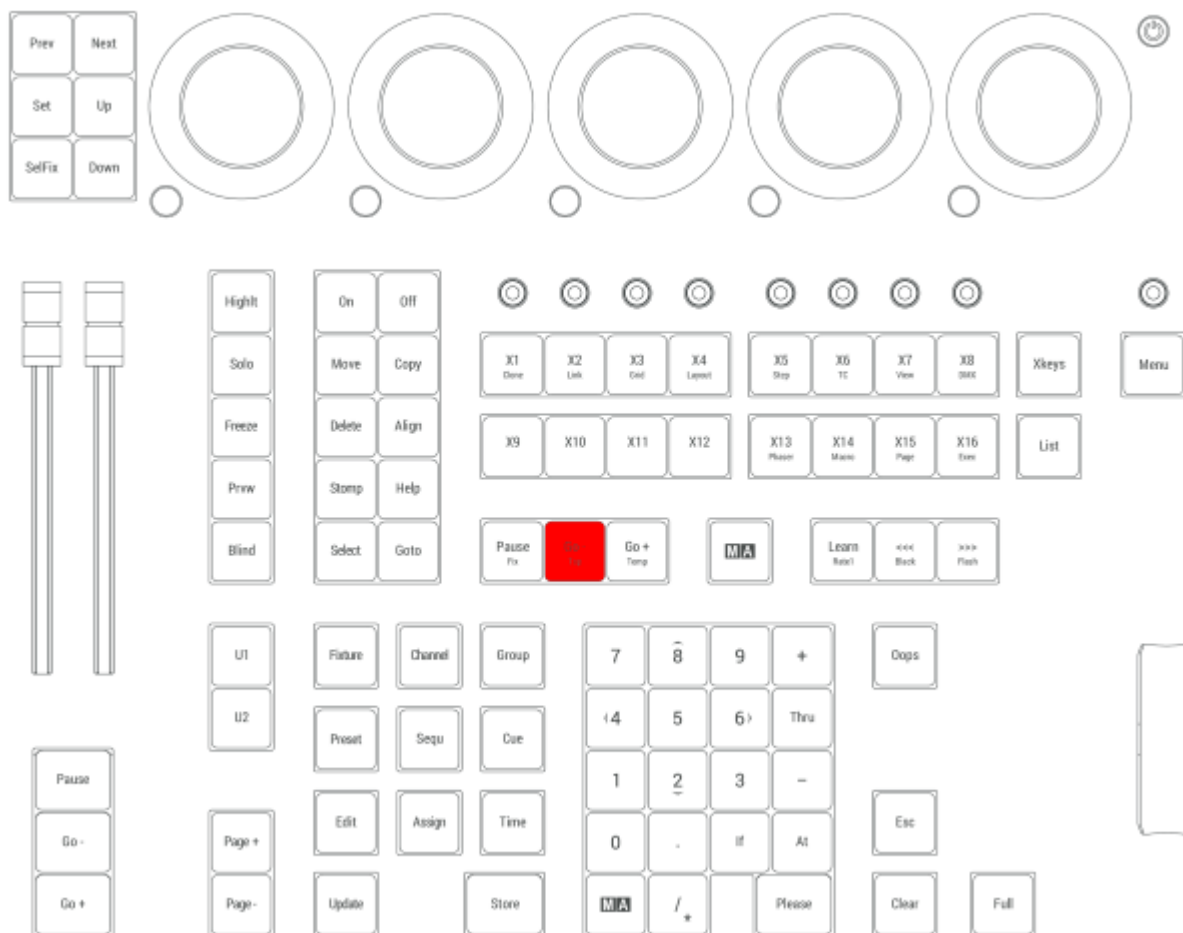

*Location on grandMA3 compact consoles and grandMA3 onPC command wing*