



Grand Master

The Grand master is placed on the right side of the console.

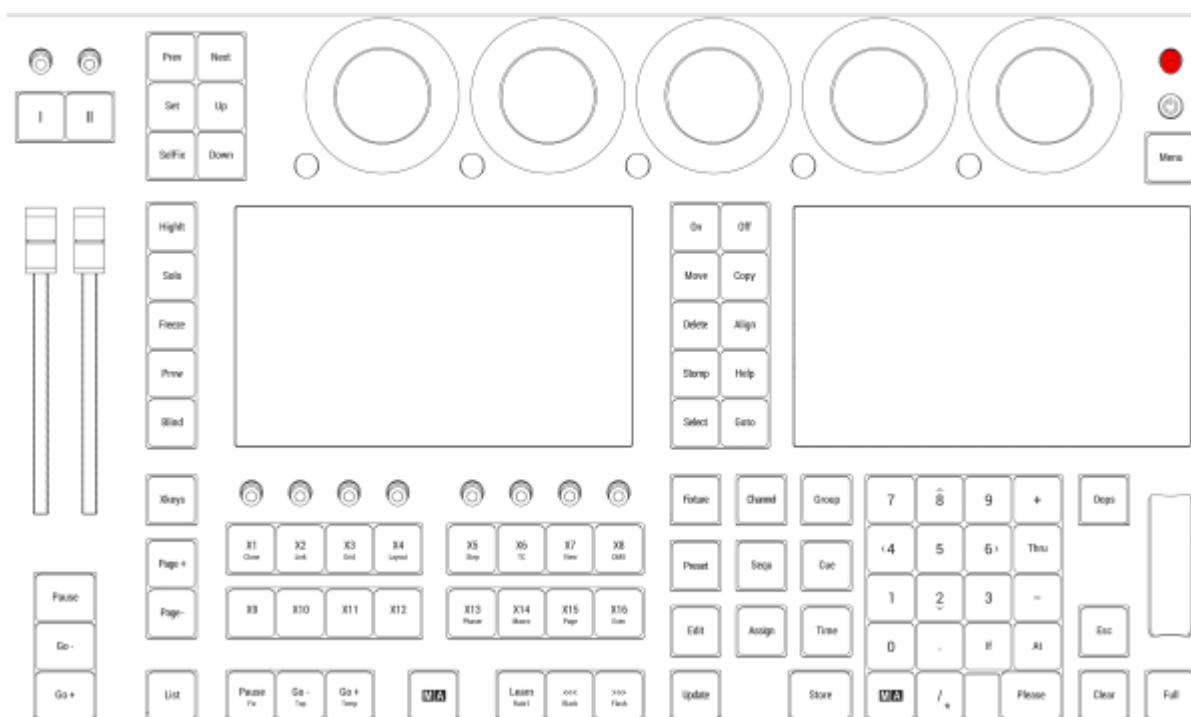

Location on grandMA3 full-size and grandMA3 light consoles

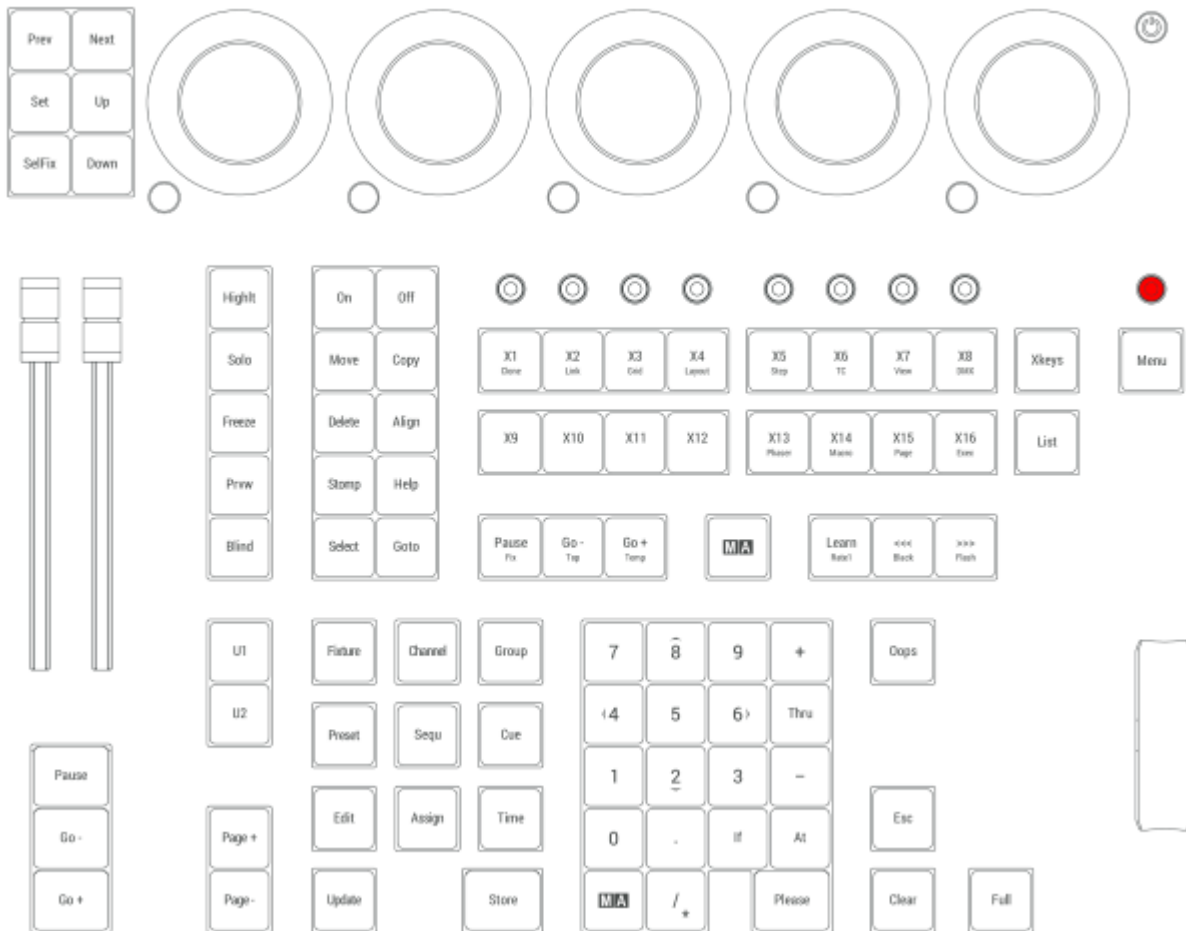

Location on grandMA3 compact consoles and grandMA3 onPC command wing

The Grand Master is used to limit the output of the intensity of all the fixtures patched in the show.

By default, turning the knob adjusts intensity. This can be changed in the Special Executor Configuration menu. To access the Special Executor Configuration menu press **Assign** and the Grand Master knob. This menu can also be opened using the SpecialExec keyword in the command line. For more information about SpecialExec, see the [SpecialExec keyword](#) topic.

To read more about Executor Configuration, see the [Executor Configuration](#) topic.

The Grand Master is also displayed on the right side of the encoder bar on screen 1:



Grand Master in the encoder bar

The Grand Master level can be set by the fader and the Grand Master function can be enabled or disabled by pressing **Grand Master**.

The Grand Master can also be assigned to an executor. See the [**Assign object to an Executor**](#) topic.