



X4 | Layout key

At the moment all Xkeys behave like executors. **X4** is executor 294.

Layout

Pressing and holding **MA** + **X4** enters the Layout keyword into the command line.

A screenshot of a dark grey command line interface. On the left, there is a small icon of the 'MA' logo. To its right, the text 'User name[Fixtures]> Layout' is displayed in a light grey font.

For more information about Layout, see the [Layout keyword](#) topic.

Appearance

Pressing and holding **MA** + **X4** + **X4** enters the Appearance keyword into the command line.

A screenshot of a dark grey command line interface. On the left, there is a small icon of the 'MA' logo. To its right, the text 'User name[Fixtures]> Appearance' is displayed in a light grey font.

For more information about Appearance, see the [Appearance keyword](#) topic.


Scribble


Pressing and holding **MA** + **X4** + **X4** + **X4** enters the Scribble keyword into the command line.

A screenshot of a dark grey command line interface. On the left, there is a small icon of the 'MA' logo. To its right, the text 'User name[Fixtures]> Scribble' is displayed in a light grey font.

For more information about Scribble, see the [Scribble keyword](#) topic.

 X4 is located in the command section.



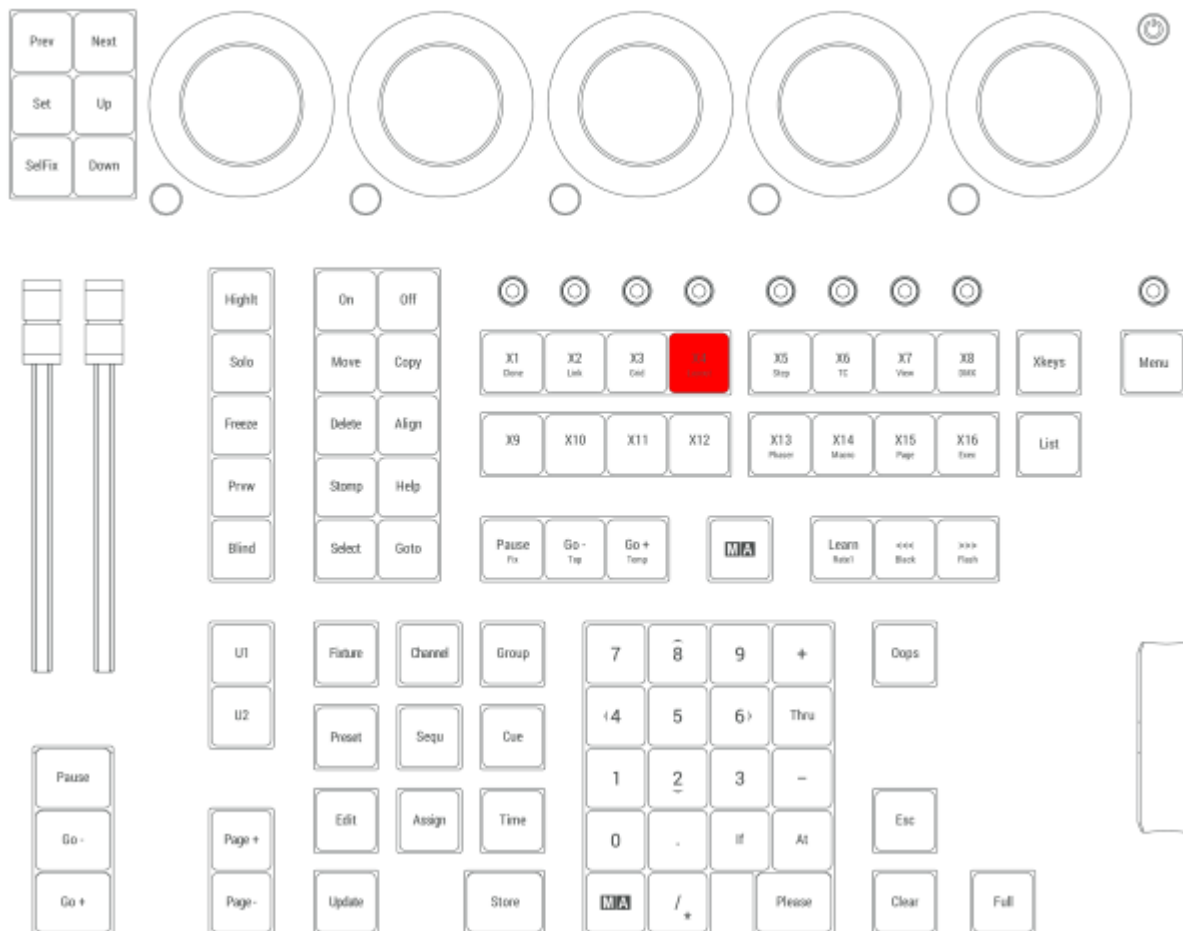

Location on grandMA3 compact consoles and grandMA3 onPC command wing