



FaderX Keyword

To enter the FaderX keyword in the command line, type **FaderX**.

Description

The FaderX keyword represents the Crossfade function of a sequence.

Crossfade gradually activates the next cue of a sequence in accordance with the position of the fader.

For more information see the [Executors](#).

Syntax

Assign FaderX At Executor [Number]

FaderX Sequence [Sequence_ID] At [Value]

Example

- To assign FaderX as executor 302, type:

```
MA User name[Fixture]> Assign FaderX At Executor 302
```

- To set the FaderX value to 10% of the fader range for sequence 5, type:

```
MA User name[Fixture]> FaderX Sequence 5 At 10
```