

## System Requirements grandMA2 onPC

If you want to run the grandMA2 onPC your PC, here's what it takes.

	Recommended
ndows® 7	
ndows® 8	
ndows® 8.1	
ndows® 10	
ndows® 11	
with admin rights	
U Dual Core 2.4 GHz or faster	
h SSE2 support	
В	8 GB
GB available space	type SSD
y graphic card with hardware acceleration and 512	
00 x 900 or higher	1920 x 1080
DBASE-TX, 1000BASE-T	1000BASE-T
1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Indows® 8 Indows® 8.1 Indows® 10 Indows® 11 Indows® 11 Indows® 11 Indows® 12 Indows® 15 Indows® 15 Indows® 16 Indows® 16 Indows® 17 Indows® 17 Indows® 17 Indows® 17 Indows® 17 Indows® 17 Indows® 18 Indows 18 I

IBM® compatible PC or notebook is necessary.

## Additional requirements:

- Make sure your Windows® always runs using the latest service pack and updates.
- To save a grandMA2 show file as a grandMA3 show file, Windows® 10 is required. For more information see <a href="Save as grandMA3">Save as grandMA3</a>.
- To use the online help and to download the latest version of grandMA2 onPC, you need internet access.
- To save to a USB stick, you need a USB 2.0 or 3.0 port.

We recommend that you visit your PC manufacturer's website for information about updated drivers and hardware compatibility.