



Align Keyword

To enter the Align keyword in the command line, use one of the options:

- Press **Align**
- Type **Align**
- Type the shortcut **Al**

Description

The Align keyword is a function keyword used to toggle through the align modes of the attribute encoders.

- To toggle through the modes, repeatedly press **Align**.

Align Modes	Index Number
Off	0
/	1
<	2
>	3
><	4
<>	5

To read more about the align modes, see [**operate fixtures - align**](#).

Syntax

Align [Mode]

Align [Index Number]



Examples

- To set the encoders to the first align mode, type:

```
MA User name[Fixture]> Align "<"
```

- To turn off any align mode, type:

```
MA User name[Fixture]> Align 0
```