


Level wheel


The level wheel is used to adjust the intensity of the selected fixtures.

The level wheel is placed on the right side of the numeric keys.

- To adjust the wheel, see Wheel Mode and Wheel Resolution in the **User settings**.

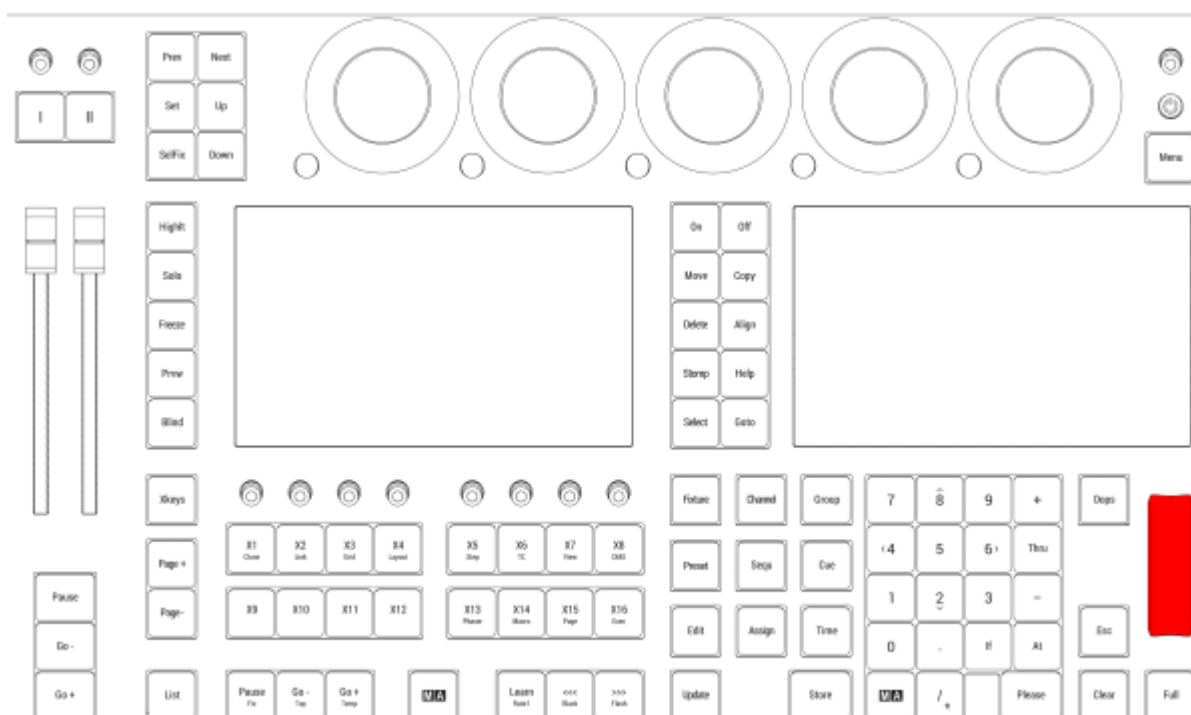

Location on grandMA3 full-size and grandMA3 light consoles

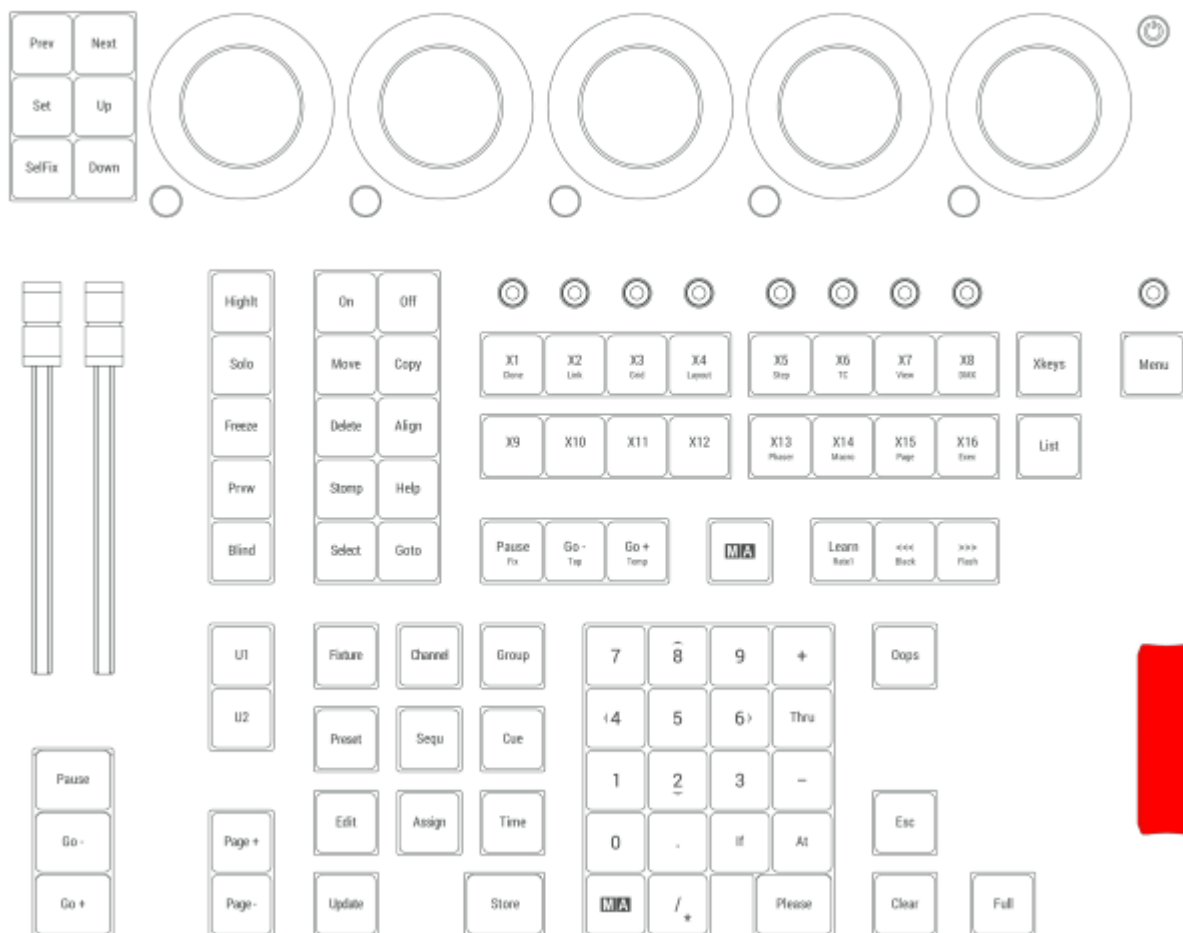

Location on grandMA3 compact consoles and grandMA3 onPC command wing/command wing XT