

## Connect grandMA3 fader wing

The grandMA3 onPC fader wing expands the onPC system with additional playback capabilities.



**Important:**

It is only possible to connect fader wings to grandMA3 onPC systems.  
A maximum of two fader wings and one command wing can be connected.



**Important:**

Independent of the devices connected to the grandMA3 onPC software, the number of parameters can only reach a maximum of 4 096.

For more information see: [\*\*Expand the Amount of Parameters topic\*\*](#)

### Procedure:


1. Connect the grandMA3 onPC fader wing with:

- command wing XT
- PC
- Laptop

2. Start the grandMA3 command wing XT, PC or laptop.
3. Switch on the grandMA3 onPC fader wing.

To connect a grandMA3 onPC fader wing in combination with a grandMA3 onPC command wing to expand the number of executors, the wing configuration has to be changed:


1. To check the USB setting, tap **Settings**, **USB configuration**, **MA3Modules**.

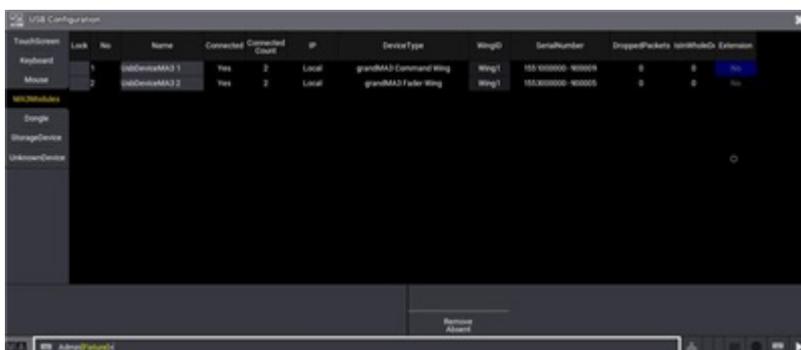

USB configuration setting



1. To adjust the wing ID, tap / or right-click **WingID** . A pop-up window opens.
2. To change the WingID to 2, tap **Wing2** .

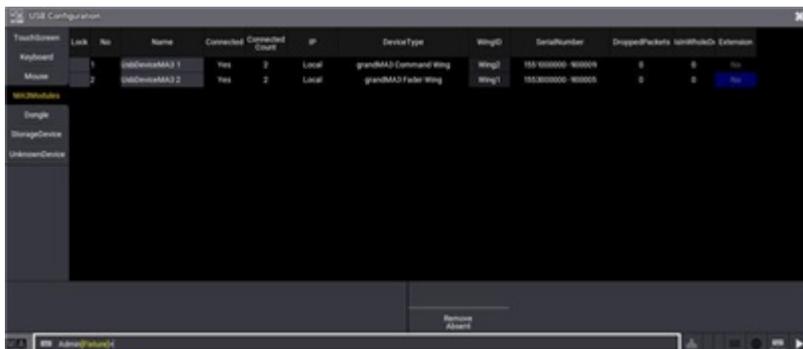

USB configuration set to Wing2