

Connect MIDI


MIDI connectors can be used for MIDI input or output. For example to send the MIDI timecode signal to the sound engineer.

- To adjust the MIDI Remotes settings, read the [Remote In and Out topic](#).
- To configure the MIDI Port settings per grandMA3 device, read [Output Configuration menu](#).

1. To access the Output configuration window, press **Menu** and tap **Output Configuration**.

-OR-

1. Use the command line to open the menu:

 User name[Fixture]> Menu "OutputConfig"

 
2. To select the MIDI Mode, tap and hold or right-click MIDI Mode. A pop-up window opens.
3. To set the MIDI direction, select **In**, **Out**, or **Through**.
4. Connect the MIDI source to the **DIN connector** on the rear panel of the console.




Hint:

MIDI Mode 'Through' receives and forwards MIDI Notes, MIDI Control Changes, and MIDI Program Changes.


Location of MIDI connectors on different products



 
grandMA3 full-size (CRV) and light (CRV) rear panel – MIDI




grandMA3 compact (XT) rear panel – MIDI

 

 grandMA3 onPC command wing (XT) rear panel – MIDI



grandMA3 I/O Node rear panel – MIDI

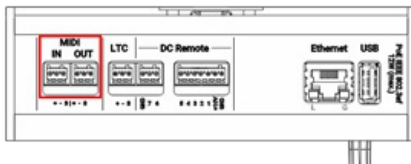

grandMA3 I/O Node DIN-Rail top panel – MIDI



Hint:

For more information on DIN connector pinout, see [Connector Pin Assignment](#).