

Power Key


Pressing **Power** boots up the console or shuts it down.




Important:

To switch the console on or off, switch the power switch on the rear panel.

Power is located in the command section.

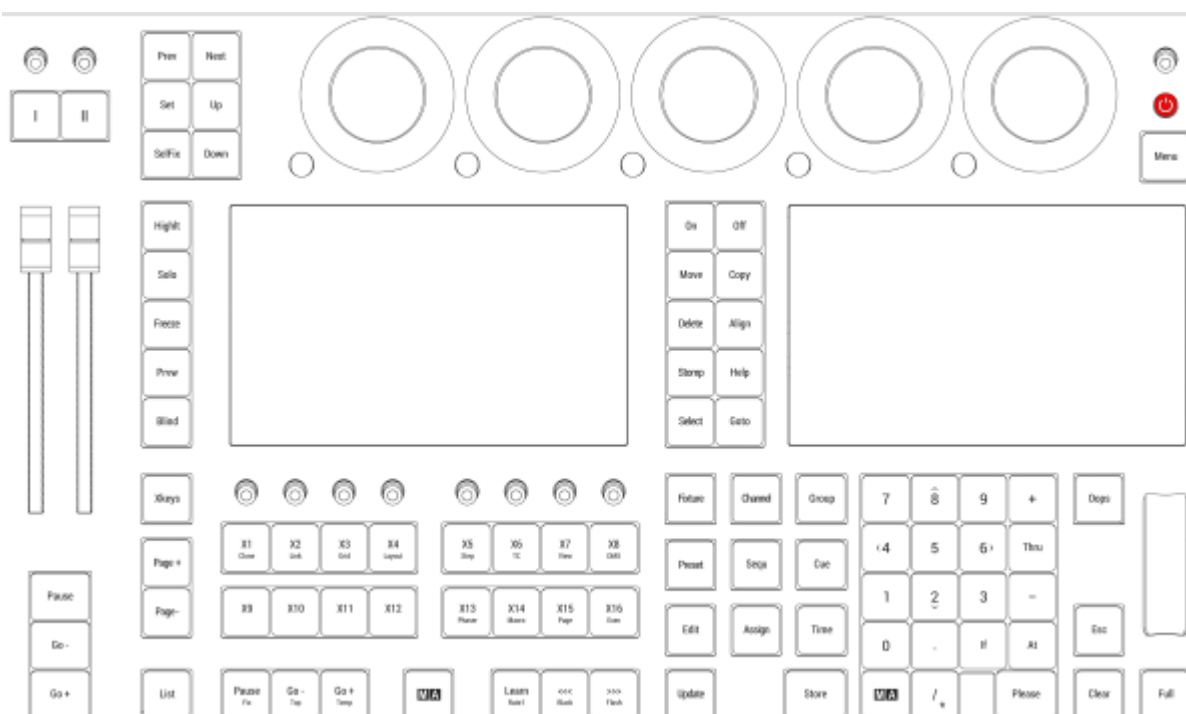

Location on grandMA3 full-size and grandMA3 light consoles

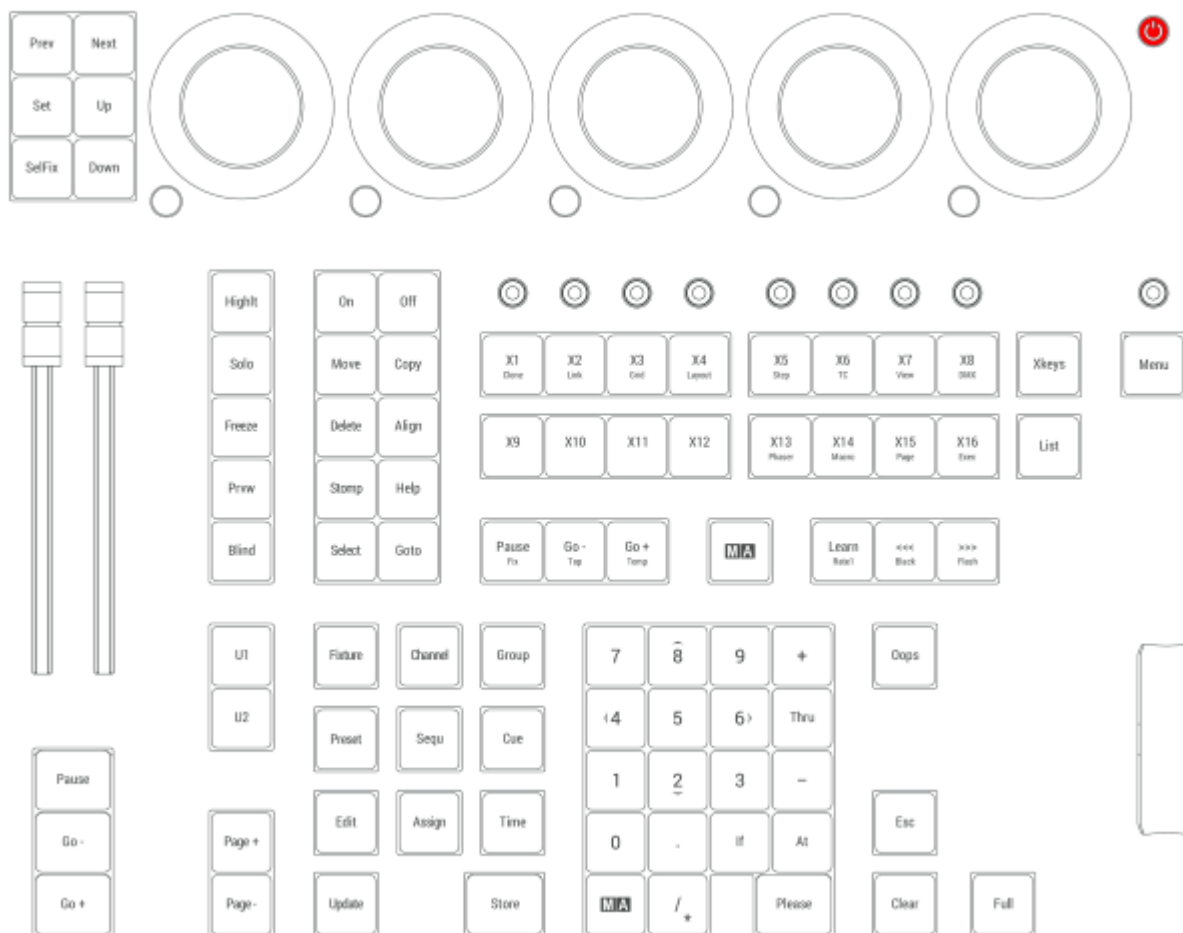

Location on grandMA3 compact consoles and grandMA3 onPC command wing