



X4 | Layout Key

All Xkeys behave like executors. **X4** is executor 294.

Layout

Pressing and holding **MA** + **X4** enters the Layout keyword into the command line.



For more information about Layout, see the [Layout keyword](#) topic.

Appearance

Pressing and holding **MA** + **X4** + **X4** enters the Appearance keyword into the command line.



For more information about Appearance, see the [Appearance keyword](#) topic.

 
Scribble


Pressing and holding **MA** + **X4** + **X4** + **X4** enters the Scribble keyword into the command line.



For more information about Scribble, see the [Scribble keyword](#) topic.

X4 is located in the command section.



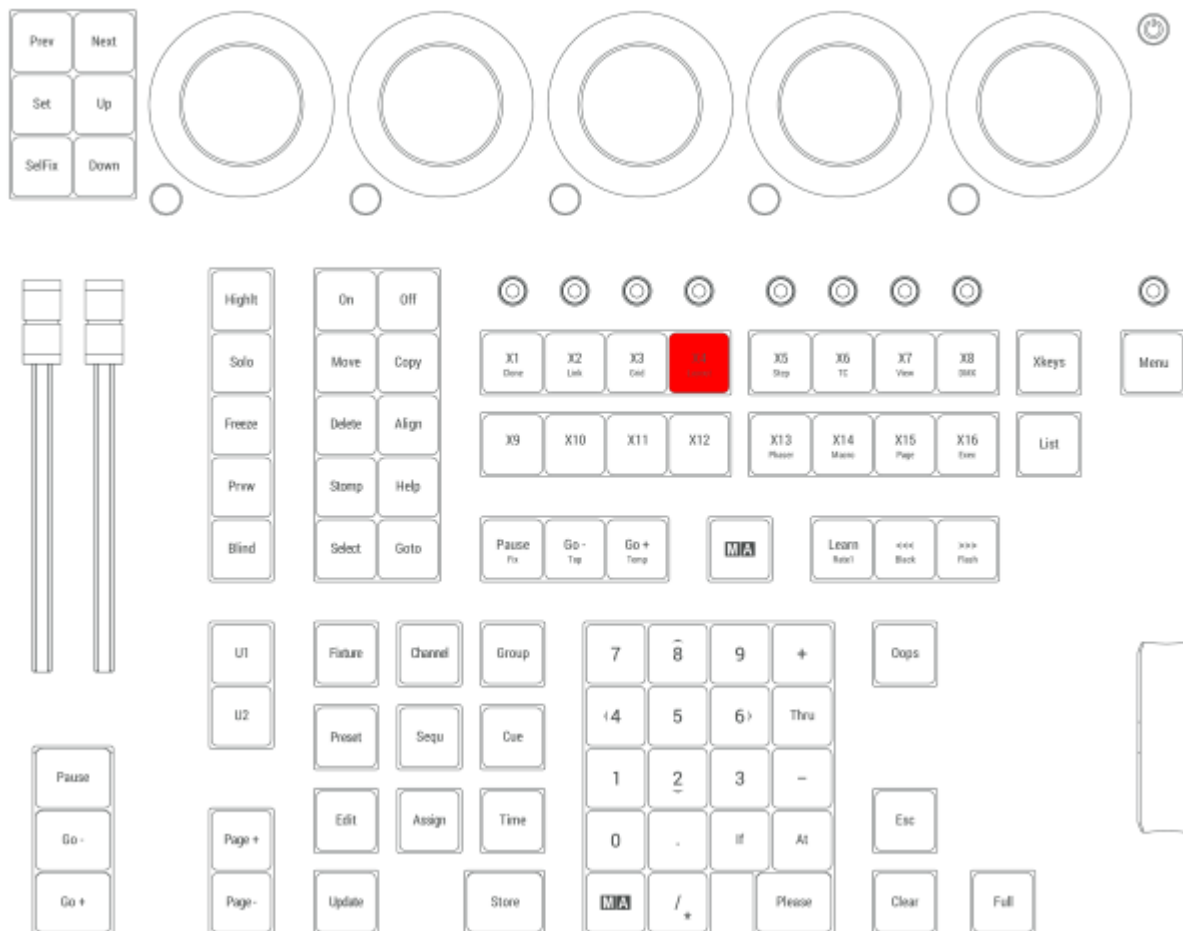

Location on grandMA3 compact consoles and grandMA3 onPC command wing