



/NoSave Option Keyword

To enter the **/NoSave** option keyword in the command line, use one of the options:

- Type **/NoSave**
- Type the shortcut **/NS**

Description

The **/NoSave** option keyword defines for the show file not to be saved when loading a show, or shutting down, restarting, or rebooting the console or your onPC.



Important:

The **/NoSave** option keyword only works in the conjunction with the **/NoConfirmation option keyword**.

Syntax

[Function] ([Object] ["Object_Name" or Object_Number]) /NoConfirmation /NoSave

General Keywords

General keywords that use the **/NoSave** option keyword:

- **LoadShow keyword**
- **Reboot keyword**
- **Restart keyword**
- **ShutDown keyword**

Examples

- To shut down the grandMA3 console without saving the show file, type:

```
MA User name[Fixture]> ShutDown /NoConfirmation /NoSave
```