



OSC Keyword

To enter the **OSC** keyword in the command line, use one of the options:

- Type **OSC**
- Type the shortcut **Os**

Description

The OSC keyword represents the open sound control data.

OSC keyword lists, exports or imports open sound control data in the Remote Inputs.

Syntax

[Function] OSC

Examples

1. List all OSC data in an interface

1. Change destination to OSC:

```
MA User name[Fixture]> ChangeDestination OSC
```

Result:

```
MA User name@ShowData/OSCBASE>
```

2. To list OSC data in the interface, type:

```
MA User name@ShowData/OSCBASE> List
```

2. Import OSC data in Remote Input


Requirement: Change destination to OSC.

For more information see [Example 1](#).

- To import OSC data, type:

A screenshot of a terminal window with a dark background. On the left is a grey box containing the red letters 'M' and 'A'. To its right, the text 'User name@ShowData/OSCBASE> Import' is displayed in white.

If the target already exists, the import pop-up will appear asking you to choose an option:

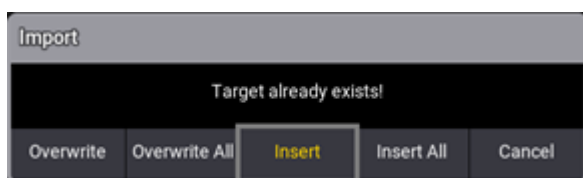

Target is occupied

- Choose an option.

The OSC is imported.