

Update grandMA3 viz-key

Important:

The grandMA3 onPC software includes the grandMA3 viz-key software. There is no additional installation required to use the grandMA3 viz-key.

In case that the grandMA3 onPC software is not installed on the computer that is running the visualizer, the separate grandMA3 viz-key software needs to be installed.



🗧 Hint:

If the grandMA3 viz-key hardware is connected to a grandMA3 onPC station or visualizer, the running software version is sent to the grandMA3 viz-key hardware.

Download the latest grandMA3 viz-key software version from <u>www.malighting.com</u>. For more information, see <u>update</u> <u>the software</u>.

The required installer is called grandMA3 Software x.x.x.x for grandMA3 viz-key.

Update Standalone Third-Party Visualizer Using a USB Stick

Requirement: The USB flash drive's data system has to be FAT32.

- 1. Extract the zip file grandMA3_viz_key_vx.x.x.zip and copy the ma folder into the root directory of the USB flash drive.
- 2. Insert the USB flash drive in the grandMA3 onPC or console USB port.

Follow the next steps from point 3.

Update Standalone Third-Party Visualizer Using the Local Hard Drive

- 1. Extract the zip file grandMA3_viz_key_vx.x.x.zip.
- For Windows systems, copy the files from the ma folder into the directory C:\ProgramData\MALightingTechnology\installation_packages.
 For macOS systems, copy the files from the ma folder into the directory ~/MALightingTechnology/installation_packages. For more information, see <u>Folder Structure</u>.
- 3. To access Software Update , tap 🥺
- 4. Tap Settings
- 5. Tap Software Update

Important:

The third-party visualizer must be running in the update mode. For more information, see the manual of the third-party software.

grandMA3 User Manual – Update the Software Version 1.9 – 2025-06-02 English



The Software Update window opens:

Φ	↑ Selected update release_viz_key_v1.9.6.0xml from internal drive									SoftwareFilter								
۲	Update	Lock	No		Name	Туре	IP	 Session 	Location	Show File	Status	Prio	Version Big	Version Small	Enabled	Online Time	Session Index	Sessic Slot
	Delease	S	2(1)		Console													
	Notes	s	3 (2)		onPC													
	-	s	1		30 - PC - Intel 13900	Undefined		3D-PC-Intel 1390	Local	Demoshow_grand	Standalone	Low	1.9.6.0	1.9.6.0		0:11:03	None	None
111	EULA	S	2		ChristianE-PC	Undefined	172.16.250.7	ChristianE-PC	Local	NewShow	UpdateMode	Normal	1.4.0.2	1.4.0.0	Yes	0:01:29	None	None
8tt	Privacy	S	5 (2)	•	NetworkNode													
0	Policy																	
2	0																	
	credits																	
Ð	Trade-																	
2	marks																	
•																		
-								AUD										
V	V				Delete Update Files					Select and Import Update Files Upd			Update De	vices	Cancel Software Upo Process		date	
Admin(Fixture)>										😫 📟								

Software Update Window with selected update file

6. Tap Select and Import Update Files . The Select Update window opens.

Select Update	Internal	\$					
Version: 📼 <mark>releas</mark>	n: 📼 release_viz_key_v1.9.6.0.xml						
Date	Name 🔺	Size					
23.08.2023 08:25	release_viz_key_v1.9.6.0.xml	4.2 kB					
	Onlast						
	Select						

Select Update pop-up

- 8. Select the location that contains the update files (internal or any plugged-in external device). Select the release_viz_key_vx.x.x.xml file.
- 9. Tap Select .
- 10. The pop-up closes and the End User License Agreement (EULA) opens. Confirm the End User License Agreement (EULA).
 - The selected update file is displayed at the title bar of the software update window.
- 11. Select the third-party visualizer with viz-key support. The selected devices turns into bright blue.
- 12. Tap Update Devices .
- 13. The software update starts copying files.

grandMA3 User Manual – Update the Software Version 1.9 – 2025-06-02 English



14. Once the file is transferred, restart the third-party visualizer with the viz-key support software.

