



Control grandMA3 Nodes

To adjust the settings in the grandMA3 Nodes, it may be convenient to control them from a connected console or onPC.

For more information, read the [Session topic](#) in the [Networking section](#).




Hint:
If you want to use Art-Net or sACN using grandMA3 nodes, make sure to switch the console to **Mode2**.
For information on how to configure the xPort Nodes in Mode2 see [Configure xPort Nodes in the Console](#).

Change Name and Set IP Address

To change the name and to set the IP address of a grandMA3 Node, open the Network Interface Menu:

- Press **Menu**.
- Opens the [menu select pop-up](#).
- Tap **Network**.
- Opens the Network menu.

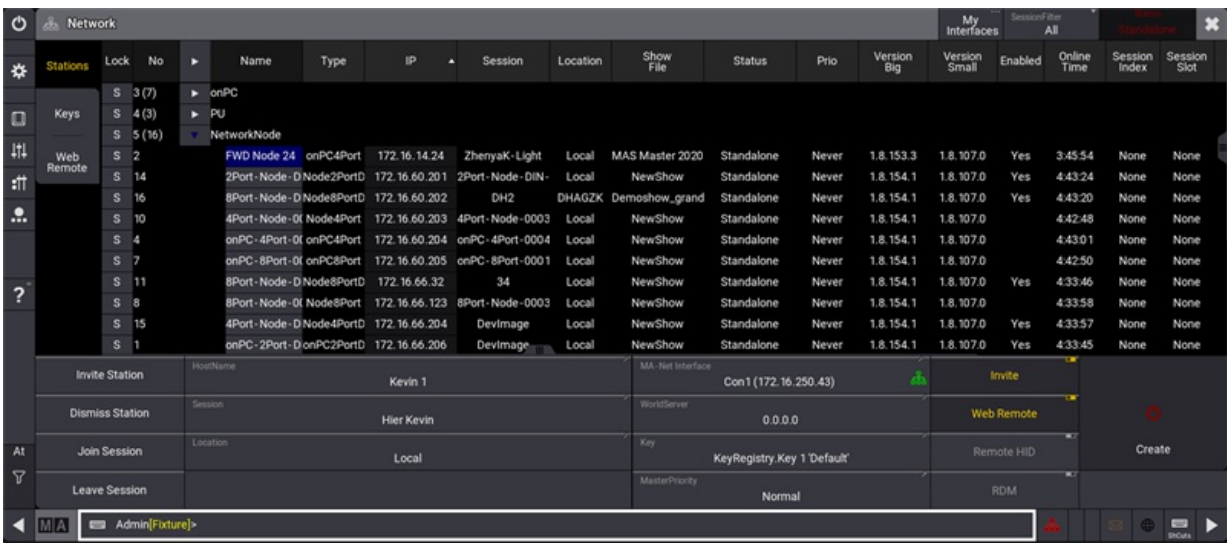

Network menu




Important:
You can only change the name or IP address of a node if it is not in another session.



Change the Name

1. Edit the name of the respective node by right-clicking with a mouse or by using **gestures**.

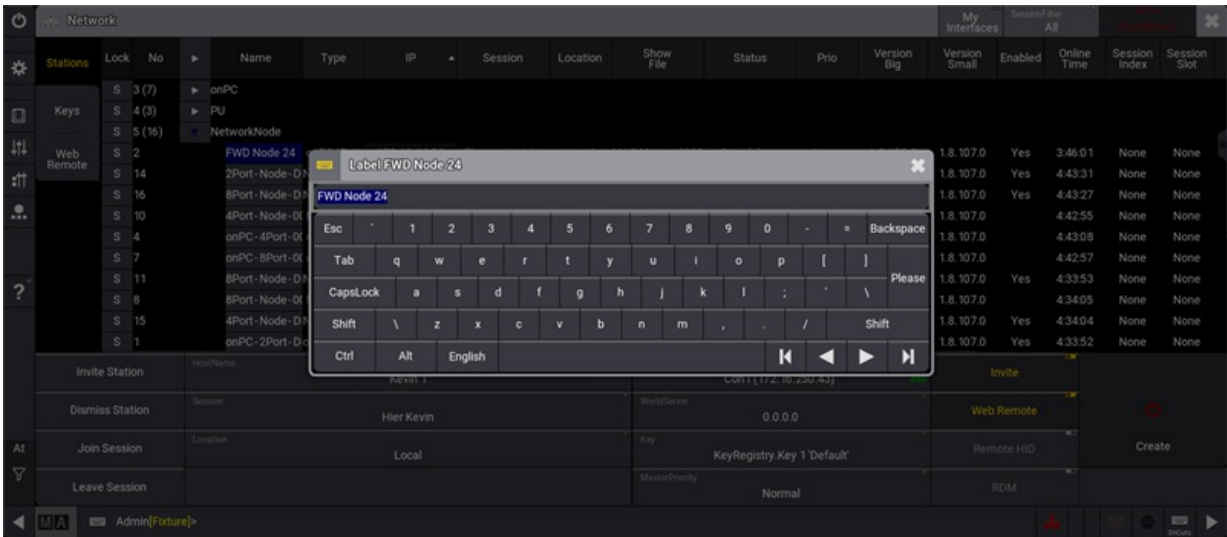


Label Node pop-up

2. Enter the desired name.
3. To confirm the changes, press **Please**.

The Node has the new name.

Change the IP Address

1. Change the IP address of the respective node by right-clicking with a mouse or by using **gestures**.
2. Edit the DHCP settings by right-clicking the DHCP field with a mouse or by using **gestures**.

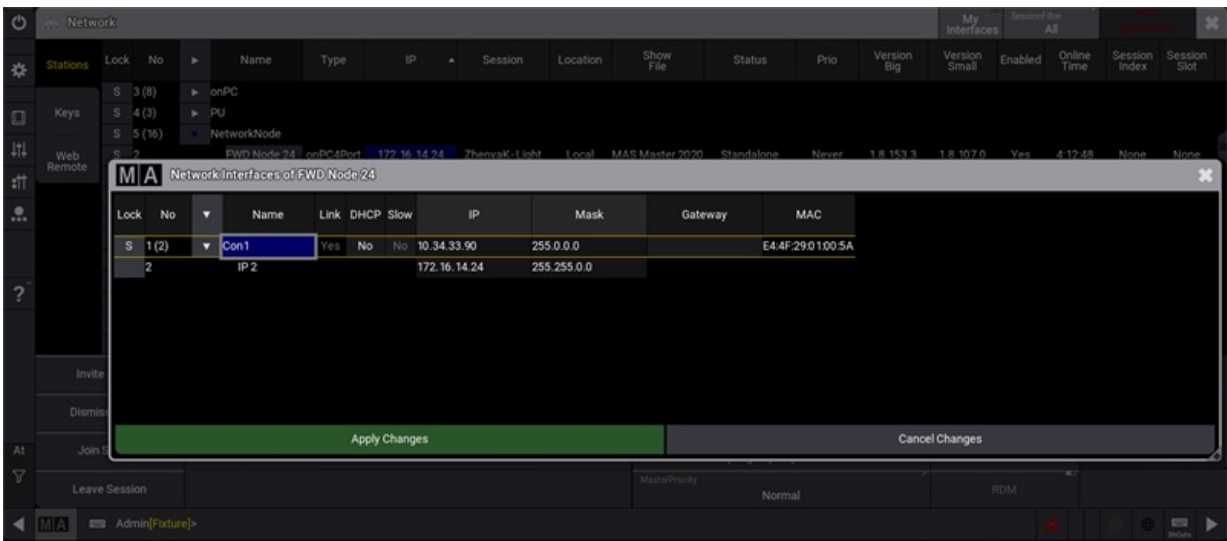

Network Interfaces pop-up of a Node



- 3. Set DHCP to **Yes** or **No**.
- 4. Edit the IP address of the respective node by right-clicking with a mouse or by using gestures.
The Edit IP pop-up opens.
- 5. Enter the new IP address.
- 6. Tap **Apply Changes** to confirm the changes.

The new IP address is set.

For more information about the network menu, read the **Network Update topic** in the **Update the Software section**.



Hint:
It is also possible to update the Nodes via **manual update**.

Change the Output Configuration

To adjust the output configuration settings in the grandMA3 Nodes, control them from a connected console or onPC.

For more information, read the **DMX port configuration topic** in the **DMX In and Out section**.

To connect a grandMA3 Node with the console, set the Node to grandMA3 mode.

Change Modes

From grandMA3 to Mode2

- To change the Node from grandMA3 to Mode2, follow these instructions:


grandMA3 screen:

	8Port- Node- 0007				Chris - Local				
IP :		172.16.250.121			Version :		1.4.2.1		
A	B	C	D	E	F	G	H		
Out	Out	Out	Out	Out	Out	Out	Out		
1	2	3	4	5	6	7	8		

- To switch to Mode2, press the rotary knob:

	Setup Menu		
Ports		Display	
Info		Special Functions	
Network		Station	


- Turn the rotary knob to select **Special Functions** and press the rotary knob to confirm:

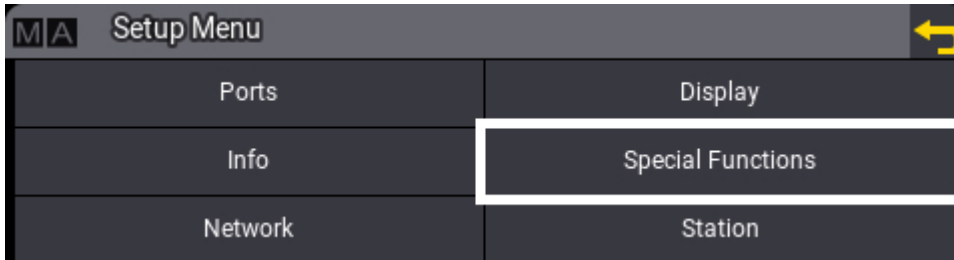

- Select **Switch to grandMA2** and press the rotary knob to confirm:



- Select **OK** and press the rotary knob to confirm:

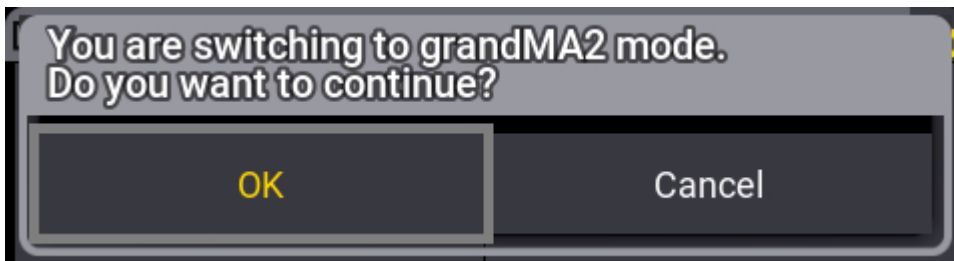

The Node reboots in Mode2.

For more information about how to switch a xPort Node from Mode2 to grandMA3, see [change modes](#).

For more information about changing to grandMA3 Mode2, read the [Mode2 topic](#) in the section grandMA3 Mode2 of the [grandMA2 User Manual](#).